

XBox Broadband Connection Setup using the PPPoE Setting in the XBox

(An XBox Live Starter Kit must be purchased before continuing)

1. Turn on the XBox with no cd or game in the console.
2. Use the directional pad or the left analog stick to highlight XBox Live.
3. Press the A button.
4. Use the directional pad or left analog stick to highlight Network Setup.
5. Press the A button.
6. Use the directional pad or left analog stick to highlight PPPoE Settings.
7. Press the A button.
8. Configuration should be highlighted with Off selected as the factory default setting.
9. Press the A button to change the Configuration to On.
10. Use the directional pad or left analog stick to highlight User Name and press A.
11. Type in your username@pldi.net (the @ sign can be found by selecting Symbols on the keyboard menu) by using the directional pad or left analog stick to highlight the letters for the user name and pressing A on the controller to select the letter.
12. Use the directional pad or left analog stick to highlight Done.
13. Press the A button.
14. Use the directional pad or left analog stick to highlight Password.
15. Press the A button.
16. Using the same procedure as the user name, type in your password.
17. Use the directional pad or left analog stick to highlight Done.
18. Press the A button.
19. Use the directional pad or left analog stick to highlight Service Name.
20. Press the A button.

21. Using the same procedure as the username and password, enter the service name as "pldi.net" (without the quotation marks).
22. Use the directional pad or left analog stick to highlight Done.
23. Press the A button.
24. Press the B button.
25. On the Network Settings screen use the directional pad or left analog stick to highlight Connect.
26. Press the A button.
27. After the connection has completed successfully Done will be highlighted, press the A button.
28. On the XBox Live screen use the directional pad or left analog stick to highlight New Account.
29. Press the A button.
30. The Welcome To XBox Live screen appears, press the A button.
31. Select the billing region using the directional pad or left analog stick to highlight the appropriate region.
32. Press the A button.
33. The Terms of Use screen appears, after reading the terms select Accept or Decline with the directional pad or left analog stick to highlight the appropriate choice. (If you do not accept the terms there are no further steps.)
34. After selecting Accept, press the A button.
35. You will then be required to enter a gamertag (similar to a user name or screen name entered for other sites to identify you on the system. To input the gamertag, press the A button and follow the same procedure as entering the user name and password.
36. Use the directional pad or left analog stick to highlight Done.
37. Press the A button.
38. Use the directional pad or left analog stick to highlight Date of Birth.
39. Press the A button.
40. Use the directional pad or left analog stick to select your birth date.

41. Press the A button.
42. Use the directional pad or left analog stick to highlight Continue.
43. Press the A button.
44. The subscription code will be required, this is provided with the XBox Live Starter Kit. To enter the code press the A button and enter the code included with the XBox Live Starter Kit, including the hyphens. Using the directional pad or left analog stick to highlight Done.
45. Press the A button.
46. Use the directional pad or left analog stick to highlight Continue.
47. Press the A button.
48. The Credit Card information screen will appear. Payment Method should be highlighted, if not use the directional pad or left analog stick to highlight Payment Method.
49. Press the A button.
50. Use the directional pad or left analog stick to highlight the appropriate credit card company.
51. Press the A button.
52. Use the directional pad or left analog stick to highlight Cardholder Name.
53. Press the A button.
54. Use the same method of inputting the username to input the name as it appears on the credit card. Use the directional pad or left analog stick to highlight Done.
55. Press the A button.
56. Use the directional pad or left analog stick to highlight Credit Card Number.
57. Press the A button.
58. Use the same method of inputting the username to input the credit card number. Use the directional pad or left analog stick to highlight Done.
59. Press the A button.
60. Use the directional pad or left analog stick to highlight Expiration Date.
61. Press the A button.

62. Use the directional pad or left analog stick to select the appropriate month and year of expiration.
63. Press the A button.
64. Use the directional pad or left analog stick to highlight Phone Number.
65. Press the A button.
66. Use the same method of inputting the username to input your telephone number. Use the directional pad or left analog stick to highlight Done.
67. Press the A button.
68. Use the directional pad or left analog stick to highlight continue.
69. Press the A button.
70. The Billing Address screen will appear. Street Address should be highlighted, if not use the directional pad or left analog stick to highlight Street Address.
71. Press the A button.
72. Use the same method of inputting the username to input your billing address. Use the directional pad or left analog stick to highlight Done.
73. Press the A button.
74. Use the directional pad or left analog stick to highlight City.
75. Press the A button.
76. Use the same method of inputting the username to input your City. Use the directional pad or left analog stick to highlight Done.
77. Press the A button.
78. Use the directional pad or left analog stick to highlight State/Territory.
79. Press the A button.
80. Use the directional pad or left analog stick to highlight the desired state for the billing address.
81. Press the A button.
82. Use the directional pad or left analog stick to highlight Postal Code.

83. Press the A button.

84. Use the same method of inputting the username to input your zip code. Use the directional pad or left analog stick to highlight Done.

85. Press the A button.

86. Use the directional pad or left analog stick to highlight Email Address.

87. Press the A button.

88. Use the same method of inputting the username to input your e-mail address. Use the directional pad or left analog stick to highlight Done.

89. Press the A button.

90. Use the directional pad or left analog stick to highlight Done.

91. Press the A button.

92. You can now insert a XBox Live game and begin playing with others around the world.