

# **XBox Broadband Connection Setup using a Router**

(An XBox Live Starter Kit must be purchased before continuing)

1. Turn on the XBox with no cd or game in the console.
2. Use the directional pad or the left analog stick to highlight XBox Live.
3. Press the A button.
4. On the XBox Live screen use the directional pad or left analog stick to highlight New Account.
5. Press the A button.
6. The Welcome To XBox Live screen appears, press the A button.
7. Select the billing region using the directional pad or left analog stick to highlight the appropriate region.
8. Press the A button.
9. The Terms of Use screen appears, after reading the terms select Accept or Decline with the directional pad or left analog stick to highlight the appropriate choice. (If you do not accept the terms there are no further steps.)
10. After selecting Accept, press the A button.
11. You will then be required to enter a gamertag (similar to a user name or screen name entered for other sites to identify you on the system. To input the gamertag, press the A button and follow the same procedure as entering the user name and password.
12. Use the directional pad or left analog stick to highlight Done.
13. Press the A button.
14. Use the directional pad or left analog stick to highlight Date of Birth.
15. Press the A button.
16. Use the directional pad or left analog stick to select your birth date.
17. Press the A button.
18. Use the directional pad or left analog stick to highlight Continue.
19. Press the A button.

20. The subscription code will be required, this is provided with the XBox Live Starter Kit. To enter the code press the A button and enter the code included with the XBox Live Starter Kit, including the hyphens. Using the directional pad or left analog stick to highlight Done.
21. Press the A button.
22. Use the directional pad or left analog stick to highlight Continue.
23. Press the A button.
24. The Credit Card information screen will appear. Payment Method should be highlighted, if not use the directional pad or left analog stick to highlight Payment Method.
25. Press the A button.
26. Use the directional pad or left analog stick to highlight the appropriate credit card company.
27. Press the A button.
28. Use the directional pad or left analog stick to highlight Cardholder Name.
29. Press the A button.
30. Use the same method of inputting the username to input the name as it appears on the credit card. Use the directional pad or left analog stick to highlight Done.
31. Press the A button.
32. Use the directional pad or left analog stick to highlight Credit Card Number.
33. Press the A button.
34. Use the same method of inputting the username to input the credit card number. Use the directional pad or left analog stick to highlight Done.
35. Press the A button.
36. Use the directional pad or left analog stick to highlight Expiration Date.
37. Press the A button.
38. Use the directional pad or left analog stick to select the appropriate month and year of expiration.
39. Press the A button.

40. Use the directional pad or left analog stick to highlight Phone Number.
41. Press the A button.
42. Use the same method of inputting the username to input your telephone number. Use the directional pad or left analog stick to highlight Done.
43. Press the A button.
44. Use the directional pad or left analog stick to highlight continue.
45. Press the A button.
46. The Billing Address screen will appear. Street Address should be highlighted, if not use the directional pad or left analog stick to highlight Street Address.
47. Press the A button.
48. Use the same method of inputting the username to input your billing address. Use the directional pad or left analog stick to highlight Done.
49. Press the A button.
50. Use the directional pad or left analog stick to highlight City.
51. Press the A button.
52. Use the same method of inputting the username to input your City. Use the directional pad or left analog stick to highlight Done.
53. Press the A button.
54. Use the directional pad or left analog stick to highlight State/Territory.
55. Press the A button.
56. Use the directional pad or left analog stick to highlight the desired state for the billing address.
57. Press the A button.
58. Use the directional pad or left analog stick to highlight Postal Code.
59. Press the A button.
60. Use the same method of inputting the username to input your zip code. Use the directional pad or left analog stick to highlight Done.

61. Press the A button.
62. Use the directional pad or left analog stick to highlight Email Address.
63. Press the A button.
64. Use the same method of inputting the username to input your e-mail address. Use the directional pad or left analog stick to highlight Done.
65. Press the A button.
66. Use the directional pad or left analog stick to highlight Done.
67. Press the A button.
68. You can now insert a XBox Live game and begin playing with others around the world.